




Model:

3400

Product Type:

4-Roll Side Load Masker

Call 1.800.237.6913 for questions regarding assembly or other inquiries.

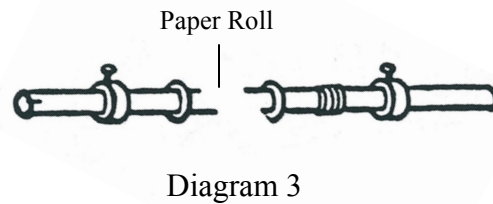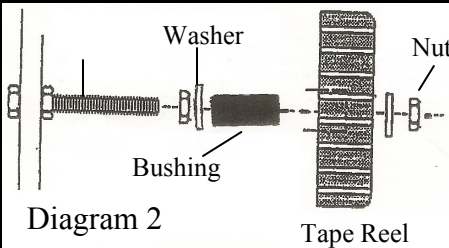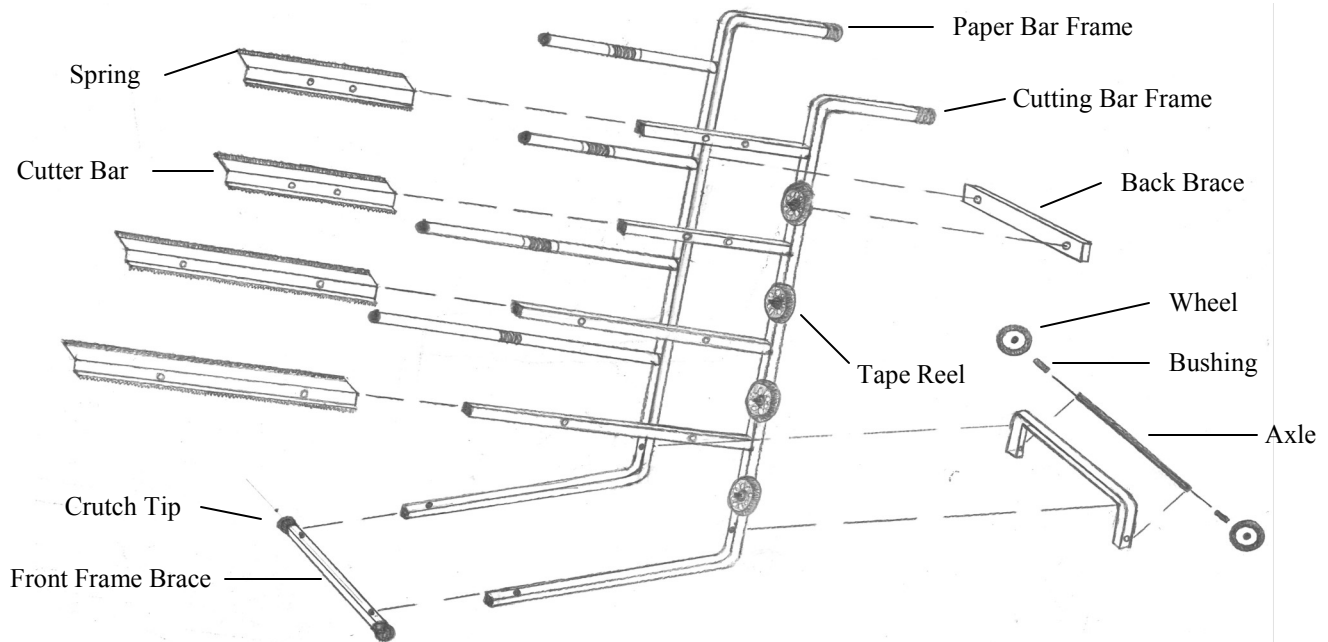

Directions:

- Step 1** Bolt Cutter Bar Frame and Paper Bar Frame to the Back Wheel Frame Brace using (4) 5/16 x 18 x 1 3/4" bolts. Do Not Tighten Bolts at this time.
- Step 2** Attach Front Frame Brace to the front of the Cutter Bar Frame and Paper Bar Frame. Do Not Tighten Bolts at this time.
- Step 3** Bolt Back Brace to the Cutter Bar Frame using (1) 1/4 x 20 x 3" Bolt, then bolt the Back Brace to the Paper Bar Frame using 1/4 x 20 x 1 1/4 " bolt.
- Step 4** Square and Level Unit and tighten all bolts at this time.
- Step 5** Slide Axle through the Back Wheel Frame Brace, Slide on wheels on axle, tap on axle caps.
- Step 6** Install 9" cutter bar on to the top bar on the cutter bar frame using (2) 1/4" x 20 x 1" bolt and nut. Tighten at this time.
- Step 7** Install 9" cutter bar on to the second bar on the cutter bar frame using (2) 1/4" x 20 x 1" bolt and nut. Tighten at this time.
- Step 8** Install 15" cutter bar on to the third bar on the cutter bar frame using (2) 1/4" x 20 x 1" bolt and nut. Tighten at this time.
- Step 9** Install 21" cutter bar on to the fourth bar on the cutter bar frame using (2) 1/4" x 20 x 1" bolt and nut. Tighten at this time.
- Step 10** Install 4 1/2" spring on the first 9" cutter bar.
- Step 11** Install 4 1/2" spring on second 9" cutter bar.
- Step 12** Install 9" spring on 15" cutter bar.
- Step 13** Install 9" spring on 21" cutter bar.
- Step 14** Tape Reel Assembly – Install tape reel assembly – diagram 2
- Step 15** Paper Bar Assembly – Install paper -- diagram 3
- Step 16** Align the tape to paper, leaving 1/2 of the tape on the paper and 1/2 of the tape for the edge to stick to the car.
- Step 17** Install Crutch Tips onto Front Frame Brace.