


Model:

3401

Product Type:

Bumper Stand

Call 1.800.237.6913 for questions regarding assembly or other inquiries.

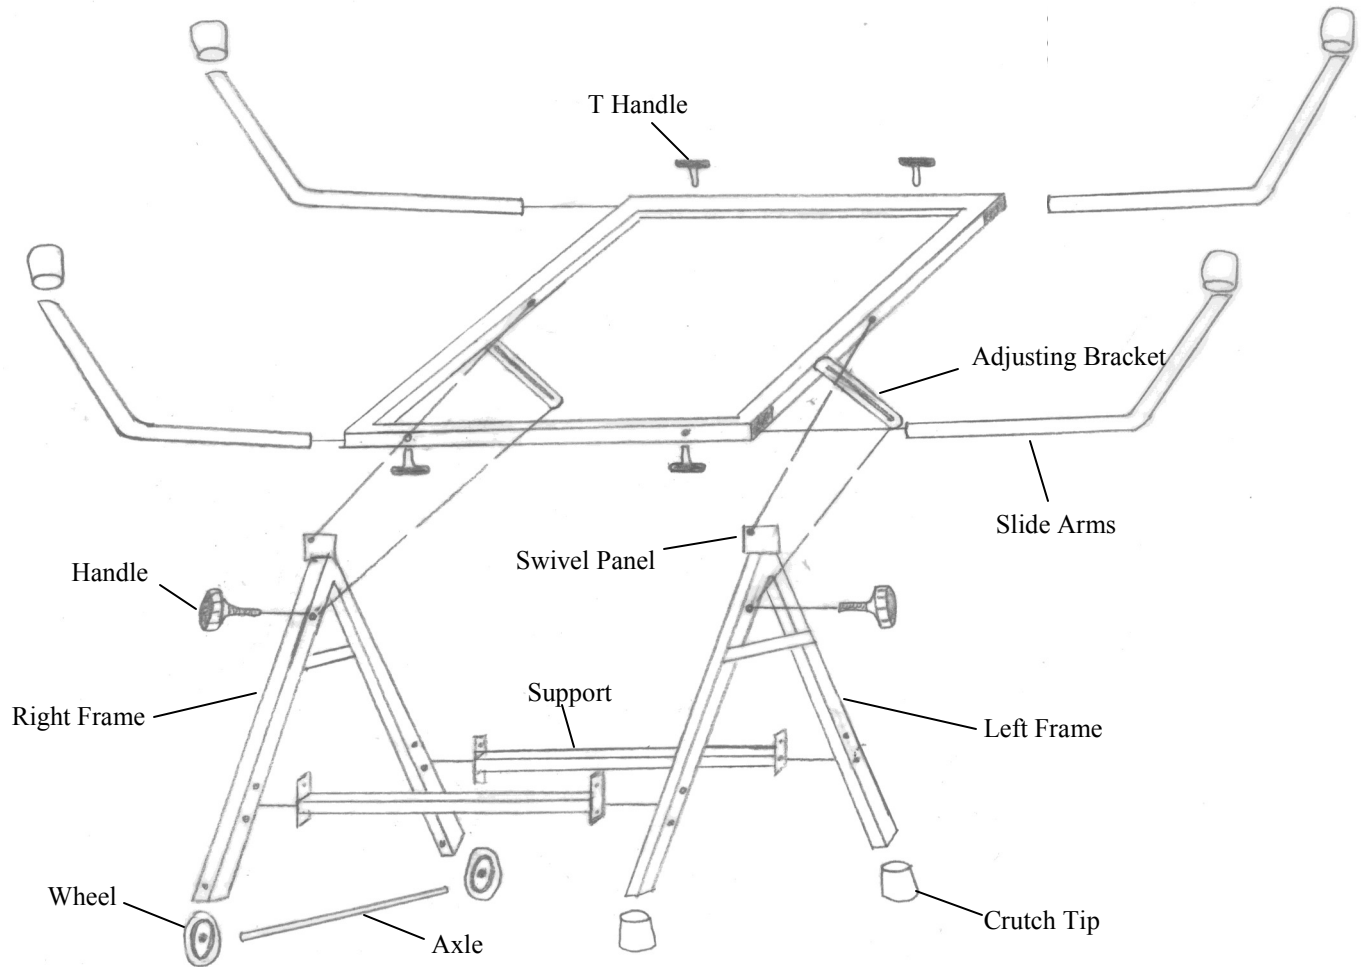

Assembly Instructions

Step 1: Bolt Supports to Right Frame and Left Frame using 5/16 x 18 x 1 Bolts and 5/16 x 18 nuts.]

Step 2: Set Main Frame on top of right and left frame. Slide 5/16 x 18 x 1 /34 bolts through swivel plates then through main frame, slide on 5/16 washers and 5/16 x 18 nylon lock nuts. Do not tighten at this time.

Step 3: Slide 1 1/2 Handles through adjusting brackets. Thread through welded nut on right and left frames.

Step 4: Slide axle through right frame side, put wheels on axle, tap on caps.

Step 5: Tighten support bolts

Step 6: Tighten swivel plate bolts so main frame can swivel freely.

Step 7: Slide arms into main frame. Thread 1 1/2 T-Handles through welded nuts on main frame, tighten to keep arms in place.

Step 8: Install crutch tips on arms and on the feet of left frame.